 


RFID HeadlightStickersTM



HeadlightStickers[™] are non-transferrable passive (battery-free) RFID transponders for automatic vehicular identification. Each sticker is powered with energy from the reader. Upon removal, it is rendered ineffective to prevent theft or unauthorized transfer or sharing of credentials.

Specifications	
Dimensions	3.8" by 0.5"
Frequency	915 ± 13 Mhz
Encoding	26-bit Wiegand
Operating Temperature	-40°F up to 185°F
Relative Humidity	Up to 95% RH
Programmable Data Retention	10 years

9601 Irvine Center Dr. Irvine, CA 92618 888-929-7343 headlightsticker.com

Break on Removal Security: Renders devices unusable when they are peeled from a vehicle.

Durability Features:


- Water resistant
- Impact resistant
- Long lasting adhesive
- UV-stabilized to withstand prolonged sunlight
- Rated to operate in extreme temperatures





Installation Guidelines

Prior to installation, tags must be handled properly. Tags <u>cannot be bent or folded</u> when handled or in storage. Place the tag face down on a flat surface, then hold the tag flat while you peel the backing away from the tag.

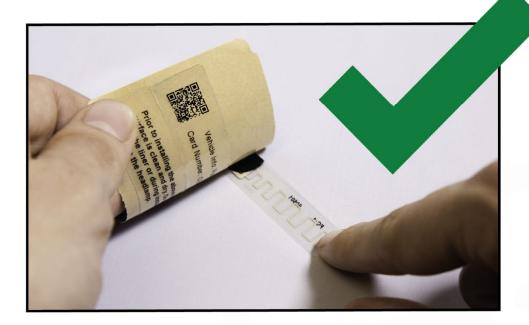



9601 Irvine Center Dr. Irvine, CA 92618 888-929-7343 headlightsticker.com

- For optimal success rates, the tag should be placed with two inches of headlight above and below the sticker (i.e. not near the car's frame and with one inch of clearance from the left and right.
- Sticker MUST be installed horizontally.
- For best results, place the sticker in a location where the vehicle's approach will bring the sticker to face the reader.




headlightsticker.com/support



Installation (Continued)

Always place the HeadlightStickerTM horizontally on the headlight.



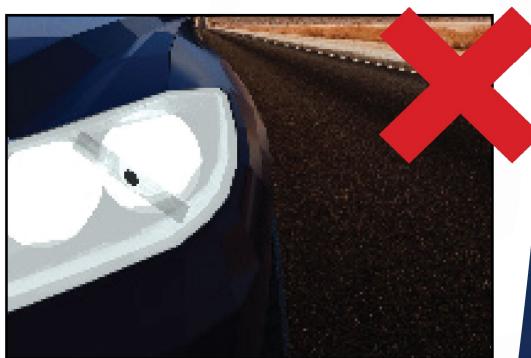

9601 Irvine Center Dr. Irvine, CA 92618 888-929-7343 headlightsticker.com

When placing the tag, you only have one chance!
Removing the tag – even if it was only applied for a second – can render the tag ineffective.

If the tag is installed incorrectly, remove it, discard it, and install another one.



headlightsticker.com/support



Installation (Continued)

Place the tag to face the reader for best results.



Below, the tag is on the wrong side of the reader.



9601 Irvine Center Dr. Irvine, CA 92618 888-929-7343 headlightsticker.com



headlightsticker.com/support